

NP231 TRANSFER CASE HANDLE FOR GATED SHIFTER

KIT CONSISTS OF:


No.	Qty	Part No.	Description
1.	1	715545D	NP231 HANDLE FOR GATED SHIFTER
2.	1	715598	BLACK TRANSFER CASE KNOB
3.	1	716099S	S.H.S.S. 1/4-20 X 3/8 LG CUP POINT



The installation of the 715545 bracket requires you to remove the stock shifter handle. From the applications we have done, this usually means that the bushing between the handle and the shifter gets destroyed. That along with the now worn shift knob (shown above) led us to offer a new handle assembly.



The stock shifter will need the four edges chamfered since the new handle with the tube fitting over this section has radius corners. Grind the edges and then test fit until the handle slides all the way on. The handle is an exact fit with no bushings, just a set screw to lock in place. The handle comes with a new shifter knob that is laser etched with the NP231 shift pattern.

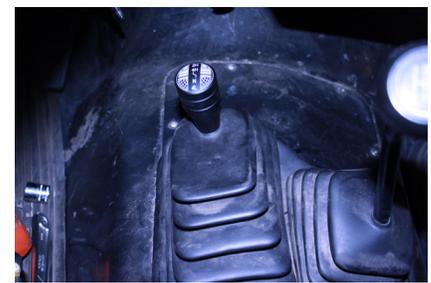

SPECIAL NOTE: The components packaged in this kit have been assembled and machined for specific type of conversions. Modifications to any of the components will void any possible warranty or return privileges. If you do not fully understand modifications or changes that will be required to complete your conversion, we strongly recommend that you contact our sales department for more information. This instruction sheet is only to be used for the assembly of Advance Adapter components. We recommend that a service manual pertaining to your vehicle be obtained for specific torque values, wiring diagrams and other related equipment. These manuals are normally available at automotive dealerships and parts stores.