



## CLUTCH SLAVE CYLINDER BRACKET FOR 712548, 49, 76, 77 BELLHOUSINGS

### **KIT CONSISTS OF:**

<b>No.</b>	<b>Qty</b>	<b>Part No.</b>	<b>Description</b>
1.	1	716194	SLAVE CYLINDER PUSH ROD
2.	1	716288-BLK	BRACKET ASSEMBLY
3.	2	723704	LOCK WASHER 3/8" PLATED
4.	2	723724	H.H.C.S. 3/8"-16 x 1-3/4" PLT G2 (bracket to block)
5.	2	723725	H.H.C.S. 3/8 -16 X 2 PLATE GR 5(slave cylinder bolts)
6.	3	720015	FLAT WASHER (spacer - lower bolt hole bracket to block)

### **INSTALLATION INSTRUCTIONS:**

This bracket is designed for use on Chevy engine conversions in vehicles that were originally equipped with a hydraulic clutch. This bracket utilizes a stock Toyota slave cylinder (Toyota Part No. 31470-60022) (A.A. part No. 716213). The slave cylinder has a metric hydrlic fitting in which we offer our P/N 716215 metric to dash 3 male to male fitting. we also offer a stainless hose that works well for most applictions, 42" hose P/N 716130H or 60" hose 716130-60. Both of these hoses are dash 3 female fittings on both ends.

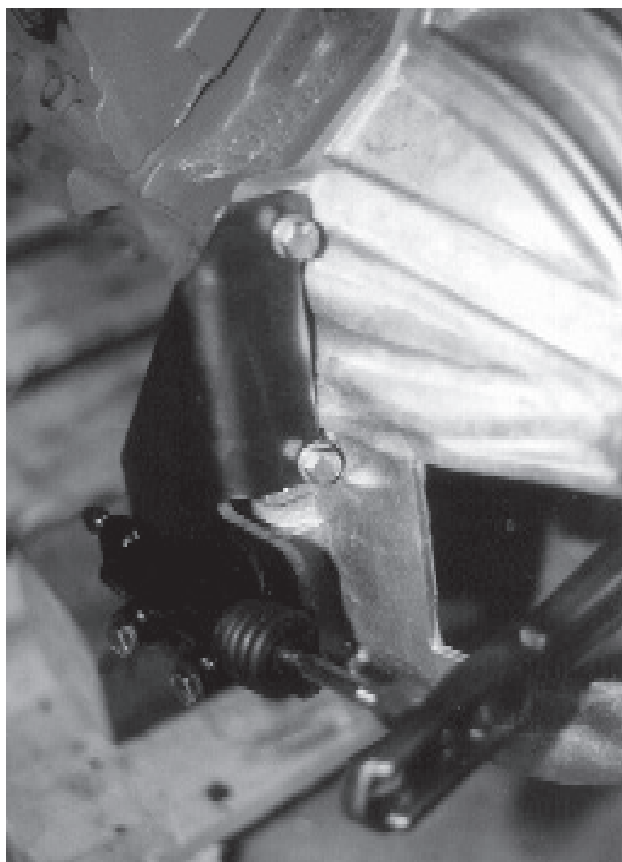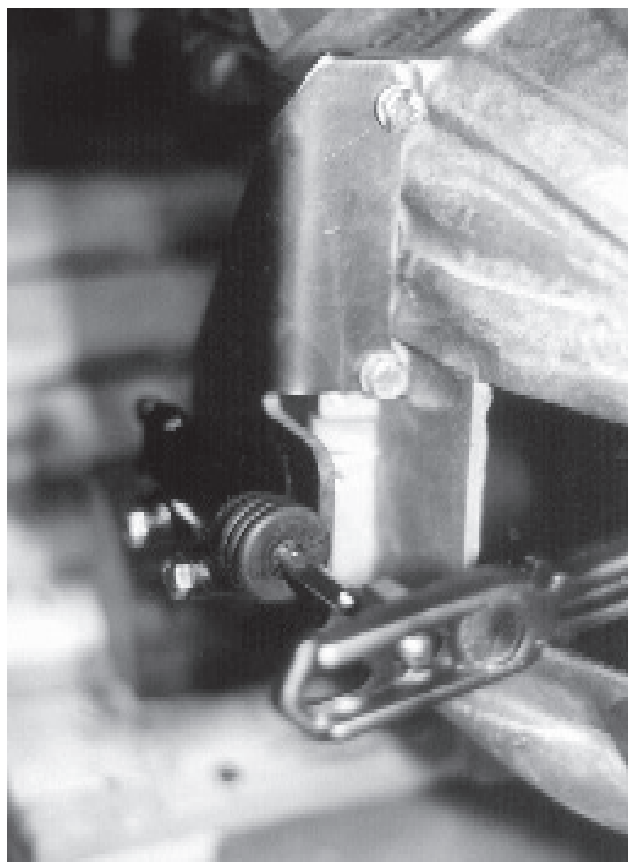

**SPECIAL NOTE:** The components packaged in this kit have been assembled and machined for specific type of conversions. Modifications to any of the components will void any possible warranty or return privileges. If you do not fully understand modifications or changes that will be required to complete your conversion, we strongly recommend that you contact our sales department for more information. This instruction sheet is only to be used for the assembly of Advance Adapter components. We recommend that a service manual pertaining to your vehicle be obtained for specific torque values, wiring diagrams and other related equipment. These manuals are normally available at automotive dealerships and parts stores.