

ADVANCE ADAPTERS INC.

P.O. Box 247, 4320 Aerotech Center Way

Paso Robles, CA 93447

Telephone: (800) 350-2223 Fax: (805) 238-4201

P/N: 715530

New Item: (6/96)

PAGE 1 OF 1

Page Rev. Date: 04-28-00

SM465 TO TOYOTA LAND CRUISER TRANSFER CASE LINKAGE BRACKET

KIT CONSISTS OF:


<u>No:</u>	<u>Qty</u>	<u>Part No.</u>	<u>Description</u>
1.	1	715527-BLK	SM465 SHIFT BRACKET
2.	2	716039	SPACER BUSHING
3.	1	716049	SHIFT SPACER
5.	1	723701	3/8"-16 NUT
6.	2	723704	3/8" LOCK WASHER
4.	2	723724	3/8"-16 x 1-3/4" H.H.C.S.
7.	2	726207	FLAT WASHER FOR PIVOT SHAFT

NOTES:

This bracket is designed for the SM465 transfer case shifter linkage for a Toyota Land Cruiser 1969-78.

INSTALLATION PROCEDURES:

1. You must shorten the threads on the Land Cruiser pivot shaft so that they do not bottom out into the SM465 case. **(This is optional)** You may want to weld the shaft to the bracket.
2. The two spacers provided P/N 716039 will be used to space the bracket off of the transmission case for clearance.

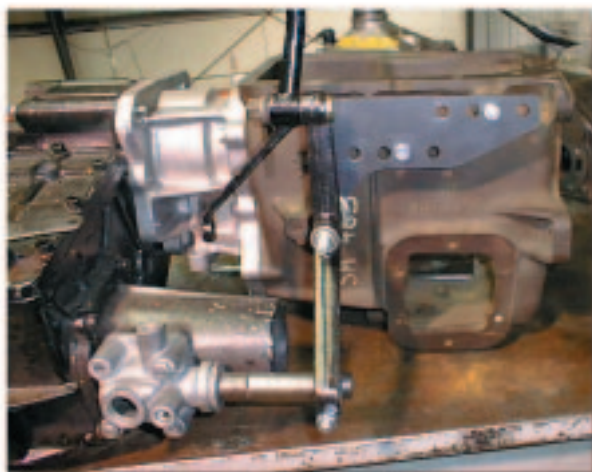

SPECIAL NOTE: The components packaged in this kit have been assembled and machined for specific type of conversions. Modifications to any of the components will void any possible warranty or return privileges. If you do not fully understand modifications or changes that will be required to complete your conversion, we strongly recommend that you contact our sales department for more information. This instruction sheet is only to be used for the assembly of Advance Adapter components. We recommend that a service manual pertaining to your vehicle be obtained for specific torque values, wiring diagrams and other related equipment. These manuals are normally available at automotive dealerships and parts stores.